



# Adding Emergency Contacts

Emergency contacts are any of 6 mobile numbers or 3 email addresses that alerts are sent to and also the only mobile numbers that can call and be called by the watch.

**Tip:** It is important you add at least 1 emergency contact number to block other callers from being able to contact your watch.

Emergency contacts can be added via the iOS or Android app as well as the desktop version of TicTocTrack.

> To add your Emergency Contacts go to DEVICES / MY DEVICES menu tabs.



**TIP:** Ensure you save numbers using the international number format, for example +61423513000



> Once entered you need to save the changes by tapping the  within the App or by clicking on the blue **SAVE** button in the left menu pane within the Desktop version.

> The numbers will automatically save to the device when the SIM has an active data connection.



> You can check this on the home screen of the watch.



**TIP:** If the changes do not automatically update. Turn the device off and back on again.