



Setting WiFi Hotspots

Our WiFi HotSpot feature allows you to set up to 2 WiFi addresses that are trusted i.e. school or home. When the watch is locating using a saved WiFi hotspot it will stop searching for a GPS location and as such will reduce the drain on the battery.

To set this feature please follow the below instructions:

- > For the Desktop Platform - Go to Device, then Device Details
- > For the App - Go to Settings (3 white dots in bottom right corner), then My Devices
- > If you have multiple Devices ensure you select the Device you are updating the settings for
- > Select Trusted WiFi HotSpots, then
- > Click on the Select button. This will bring up the most recent WiFi locations that the watch has locked onto for locations.
- > Choose the one you want, then give it a name to define this location e.g School and type in the physical address for the location.
- > Save the changes

This feature is automatic and once set you will not be required to authorise the connection each time.

IMPORTANT NOTE: Once the watch goes out of range of that WiFi hotspot it will automatically start searching using both WiFi and GPS again.